The Sony Mavica Digital Camera

LCD BACK LIGHT switch
Normally select ON.
Set to OFF to save the battery.

BRIGHT +/– button
Press to adjust the brightness of the LCD screen.

PLAY/CAMERA switch (16, 18)

Lithium battery compartment (33)

PICTURE EFFECT button (31)

PROGRAM AE button (32)

DISPLAY button
Press to display or go off the indicators on the LCD screen.
The indicators do not go off in the following modes:
Program AE, Picture effect, Manual focus, Zoom, AE Lock, Self-timer, Flash and Adjusting the exposure.

Hooks for strap

LCD screen

POWER switch
Slide down to turn on/off the power.

ACCESS lamp (16)

DISK EJECT lever (8)

Battery cover/ OPEN (BATT) button (12)

PUSH button (8)

Control button

Zoom lever
"T" side: for telephoto (subject appears closer)
"W" side: for wide-angle (subject appears farther away)
Move the zoom lever to the "W" side until the focus is sharp.
You can shoot a subject that is at least about 3 1/4 feet (about 100 cm) away from the lens surface in the telephoto position, or about 1/2 inch (about 1 cm) away in the wide-angle position.

Photocell window for LCD screen
The LCD screen becomes brighter when exposed to sunlight.

Floppy disk slot

FLASH CHARGE lamp

Flash button
AUTO is set at the factory.
Each time you press the button, the flash mode changes as follows:
AUTO (no indication) → forced-flash → no flash → AUTO

In AUTO mode, the flash goes off automatically according to the brightness of the surroundings.
The subject must be 1 5/8 feet to 8 1/3 feet (0.5 m to 2.5 m) away.
When you record using the flash and conversion lens (not supplied), an eclipse may occur.

Self-timer
Select "" with the control button, then press it.
About 10 seconds after you press the shutter button, the subject is recorded.

Exposure
Select "+EV" or "–EV" on the LCD screen with the control button, then press it to select the desired value.

+EV: To raise the exposure value (brighten the picture)
–EV: To lower the exposure value (darken the picture)

Adjustable in a range of –1.5 EV to +1.5 EV in steps of 0.5 EV.

Recording and playing back images

1 Recording images

To record the images, slide POWER down to turn on the power and insert the floppy disk until it clicks.

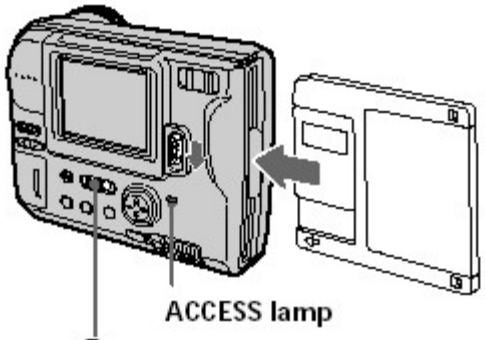

❶ **Set PLAY/CAMERA to CAMERA.**

❷ **Press the shutter button halfway down.**
The AE lock indicator ● (green) appears. AE (auto exposure), AWB (auto white balance) and AF (auto focus) are frozen.

❸ **Press the shutter button fully down.**
The image is recorded on the disk.

The number of images you can record on a floppy disk
About 25 – 40 images with all default settings. (p. 24)

The indicators during recording

The indicators on the LCD screen are not recorded.

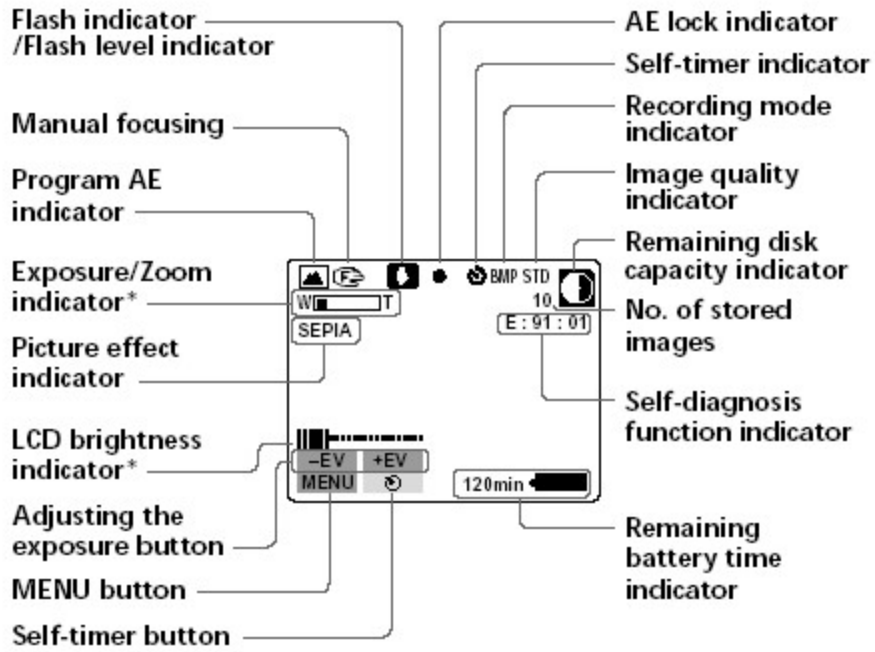

* Only displayed during operation.